

INDEX

	Paragraphs	Pages
Access covers, hydraulic pumping unit assembly (See Hydraulic pumping unit assembly access covers)		
Access door assembly	64a	109
Access door assembly, pressure gage (See Pressure gage access door assembly)		
Accumulator, equilibrator (See Equilibrator accumulator)		
Accumulator, hydraulic surge (See Hydraulic surge accumulator)		
Accumulator manifold (See Down-lock and accumulator manifold group)		
Actuator arm, switch (See Switch actuator arm)		
AC Motor		
Adapter	67c	150
Adapter assembly, loading rack (See Loading rack adapter assembly)	158	351
Adapter, launching section (See Launching section adapter)		
Adjuster, locking wedge (See Locking wedge adjuster)		
Adjustment procedures (See specific component, replacement)		
Aiming circle mount tube	74.1	163
Air bleed procedures	43,89b	86
Air filler manifold group (See Pneumatic tank valve assembly and air filler manifold group)		
Air filler valve (See Valve, air filler)		
Air pressure regulating valve (See Valve, regulating, air pressure)		
Allocation, field maintenance	5	11
Angle of elevation adjustment group	76	164
Arm, switch actuator, (See Switch actuator arm)		
Assembly procedures, (See specific component, replacement)		
Axial pistons pump,		
Description	27a	33
Replacement	80d	172
Axle, mobile launcher (See Mobile launcher axle)		
Bearings, sleeve (See Sleeve bearings)		
Bell assemblies	117	310
Blast Shield, maintenance	217, 218	398.34.11
Bleed procedures, air (See Air bleed procedures)		
Bolt, stop and positioning (See Stop and positioning bolt)		
Box connector assembly	65a	116
Bracket (See Shield assembly and bracket)		
Bracket and brace	150	345
Bracket assemblies, launcher field modification kit:		
Assembly	215c	398.34.7
Disassembly	215b	398.34.7
Installation	215d	398.34.7
Removal	215a	398.34.7
Bracket assembly, relay (See Relay bracket assembly)		
Bracket group	120	311
Bracket group, hose assembly (See Hose assembly bracket group)		
Bracket group, resistor cable assembly (See Resistor cable assembly bracket group)		
Brackets, mounting (See Mounting brackets)		
Brake operating mechanism	126	321
Brake tube assembly	127	323
Breakaway installation, launching-handling (See Launching-handling breakaway installation)		
Bridge frames, loading rack (See Loading rack bridge frames)		
Bushings, camshaft (See Camshaft bushings)		
Bushings, sleeve (See Sleeve bushings)		
Cable assembly, loudspeaker with (See Loudspeaker with cable assembly)		
Cable assembly, replacement:		
Down-lock (including switch assembly)	65b	125
Erecting beam power	64j	113
Erecting beam power output	66a	132
		403

	Paragraphs	Pages
Forward locking wedge,		
Lock	66d	137
Unlock	66c	141
Front AJAX rail lock	66h	142
Guidance set cooling system and blower relay	114.1	308
HERCULES squib	66b	134
Internal	64h	111
Launcher base	65a	116
Missile umbilical	113	306.1
Motor	67b	149
Rail power	114	306.1
Rear AJAX rail lock	66i	142
Rear locking wedge,		
Lock	66f	141
Unlock	66g	141
Up-lock	65c	127
Valve	67a	149
Cable assemblies (USARAL):		
HERCULES monorail launcher assembly No. 1 or No. 2 to HERCULES section		
simulator group	194.95	396.63
launcher control-indicators No. 1 and No. 2 to HERCULES monorail		
launcher assemblies No. 1 and No. 2	194.93	396.60
launcher control-indicators No. 1, No. 2, No. 3, and No. 4 to interlock		
junction boxes	194.97	396.65
launcher control-indicators No. 3 and No. 4 to HERCULES monorail launcher		
assemblies No. 3 and No. 4	194.94	396.62
Test station hydraulic pumping unit	194.100	396.66
Test stations	194.96	396.64
Warning horn	194.97.1	396.65
Cable assemblies (USAREUR):		
HERCULES monorail launcher assembly No. 1, No. 2, or No. 3 to HERCULES		
section simulator group	194.114	396.79
launcher control-indicator No. 1, No. 2, or No. 3 to HERCULES monorail		
launcher assembly No. 1, No. 2, or No. 3	194.113	396.78
Test station hydraulic pumping unit	194.116	396.80
Test stations	194.115	396.80
Cable assemblies, protection of	38c	77
Channel	116a	308.2
Check, operational (See Operational check)		
Check valve (See Valve, Check)		
Check valve, hydraulic oil return line (See Valve, check, hydraulic oil return line))		
Check valve, sub-surface (See Valve, check, sub-surface)		
Clamp assembly, loading rack (See Loading rack clamp assembly)		
Clamp assembly, loading rack support (See Loading rack support clamp assembly)		
Clamp, electrical (See Electrical clamp)		
Cleaning procedures (See specific component, replacement)		
Clevis group, latch (See Latch, clevis group)		
Cock, shutoff (See Shutoff cock)		
Codes, manufacturers' (See Manufacturers' codes or symbols)		
Compressed gas cylinder,		
Description	26c	25
Replacement	80j	196
Connections, cable assembly terminal (See Terminal connection, cable assembly)		
Connector assembly	116b	308
Connector assembly, box (See Box connector assembly)		
Connector, dummy (See Dummy connector)		
Connector shell, electrical (See Electrical connector shell)		
Cork gasket		
Coupling, dummy (See Dummy coupling)	124	319
Cover assembly		
Cover assembly, gasket (See Gasket cover assembly)	64b, 108	109, 301
Cover disk		
Cover group, reservoir (See Reservoir cover group)	110	301
Cover, panel (See Panel cover)		

	Paragraphs	Pages
Covers, access, hydraulic pumping unit assembly (<i>See Hydraulic pumping unit assembly access covers</i>)		
Covers, dust (<i>See Dust covers</i>)		
Cylinder, compressed gas (<i>See Compressed gas cylinder</i>)		
Cylinder, locking wedge hydraulic (<i>See Locking wedge hydraulic cylinder</i>)		
Cylinder manifold group		
Cylinders, equilibrators (<i>See Equilibrator cylinders</i>)	81g	228
Cylinders, power (<i>See Power cylinders</i>)		
Dampener, fluid pressure (<i>See Fluid pressure dampener</i>)		
Data (<i>See Description and data</i>)		
Decelerator		
Deloader valve (<i>See Valve, deloader</i>)	122	312
Depressurization (<i>See Hydraulic pressure release</i>) (<i>See Pneumatic depressurization</i>)		
Description and data:		
General		
Electrical group	8	12
Hydraulic group	10	15
Mechanical group	11	16
Dial indicating pressure gage,	9	12
Description		
Replacement,	26b	25
Air reservoir pressure		
Equilibrator accumulator pressure	80q	209
Hydraulic reservoir pressure	80o	207
Pump hydraulic pressure pressure	80n	206
Surge accumulator pressure	80r	209
Differences among models	80p	207
Disassembly procedures (<i>See specific component, replacement</i>)	17	20.1
Disk, cover (<i>See Cover disk</i>)		
Door assembly, access (<i>See Access door assembly</i>)		
Door assembly, access, pressure gage (<i>See Pressure gage access door assembly</i>)		
Down-cycle priority valve (<i>See Valve, priority, down-cycle</i>)		
Down-lock and accumulator manifold group		
Down-lock assembly, hydraulic (<i>See Hydraulic down-lock assembly</i>)	81f	226
Down-lock cable assembly (including switch assembly) (<i>See Cable assembly, replacement</i>)		
Down-lock manifold group		
Down-lock mechanism	81e	225
Down-lock tee group	29a	54
Drain tube assembly	81d	224
Draining procedure, hydraulic oil reservoir (<i>See Hydraulic oil reservoir, draining</i>)	82a.1	232
Driver wheel assembly		
Driver wheel housing assembly	134	329
Dummy connector	133	329
Dust covers, use of	116c	308
	38e	79
Effectivity, technical manual		
Electrical cables	3	10
Electrical connector shell	10b	16
Electrical and hydraulic installation, launcher field modification kit	116c	308
Electrical installation (<i>See specific component</i>)	216	398.34.7
Electrical switches		
Elevation adjustment group, angle (<i>See Angle of elevation adjustment group</i>)	10c	16
Elevator-mounted adapter rack (<i>See Adapter rack</i>)		
Equilibrator accumulator,		
Description		
Replacement	11d, 27e	17, 38
Equilibrator cylinders,	83	237
Description		
Replacement	11a, 27n	16, 47
Equilibrator safety relief valve (<i>See Valve, safety relief, equilibrator</i>)	97	288

	Paragraphs	Pages
Equilibrator system by-pass valve (See Valve, by-pass, equilibrator system) (See also Valve, globe)		
Equipment (See Tools and equipment)		
Erecting beam hook	70	152
Erecting beam, launcher (See Launcher erecting beam)		
Erecting beam power cable assembly (See Cable assembly, replacement)		
Erecting beam power output cable assembly (See Cable assembly, replacement)		
Erecting beam support, use	36d	76
Erecting indexing pin	71	154
Erecting strut fork and strut arms, maintenance (See specific component, replacement)		
Extension assembly, rail (See Rail extension assembly) (See sub-surface rail extension assembly)		
External tube fittings, hydraulic pumping unit assembly	80v	212
Filling procedure, hydraulic oil reservoir (See Hydraulic oil reservoir, filling)		
Filter, pressure fluid (See Pressure fluid filter) (See also Missile hydraulic pressure fluid filter) (See also Launcher pressure fluid filter)		
Fluid pressure dampener, Description	27c	37
Replacement	80r	209
Forms, authorized (See also Forms, records, and reports)	6b	11
Forms, records, and reports	6	11
Forward locking wedge lock cable assembly (See Cable assembly, replacement)		
Forward locking wedge unlock cable assembly (See Cable assembly, replacement)		
Forward wedge group (See Wedge group)		
Front AJAX rail lock cable assembly (See Cable assembly, replacement)		
Functional description, Complex mechanical mechanisms	29	54
Hydraulic precharge system	26	25
Launcher erecting system	27	33
Missile hydraulic system	28	51
Gage, pressure, dial indicating (See Dial indicating pressure gage)		
Gasket, cork (See Cork gasket)		
Gasket cover assembly	72	154
Gaskets, cementing	36b	75
Gaskets, replacement	37b	77
General maintenance procedures (See Procedures, general maintenance)		
Generator junction box: Assembly	220b	398.37
Disassembly	220a	398.37
Globe valve (See Valve, globe)		
Guard assembly	109	301
Guidance set cooling system replacement	139.2	334.1
Handle, handbrake (See Handbrake handle)		
HERCULES monorail launcher, maintenance (See specific component, replacement)		
HERCULES squib cable assembly (See Cable assembly, replacement)		
Hook assemblies	131	326
Hook, erecting beam (See Erecting beam hook)		
Hose assembly bracket group	96	288
Hub group, wheel (See Wheel hub group)		
Hydraulic down-lock assembly	99	296.1
Hydraulic fluid specifications	37a	77
Hydraulic network tube fittings and hose assemblies	194.90	396.59
(USARAL)	194.110	396.77
(USAEUR)		
Hydraulic networks, replacement: Axial pistons pump system	88	249
Decelerator	128	319
Erecting system	91	261
Equilibrator system	92	267
Hydraulic down-lock system	90	261
Hydraulic up-lock system	93	274

	Paragraphs	Pages
Locking wedge system	89	251
Missile hydraulic system	94	276
Precharge system	87	248
Hydraulic oil reservoir,		
Description	11b, 26f	16, 28
Draining	82a	232
Refilling	82a.2	232
Replacement	82b	232
Hydraulic panel,		
Description	11c	17
Replacement	81	217
Hydraulic precharge system (See System operation)		
Hydraulic pressure release	41	80
Hydraulic pumping unit,		
Description	11c	16
Replacement	80a	168
Hydraulic pumping unit assembly access covers	80b	172
Hydraulic pumping unit assembly network	80w	214
Hydraulic pumping unit power wiring harnesses (See Wiring harnesses)		
Hydraulic pumping unit, test station,		
(USARAL)	194.91	396.59
(USAREUR)	194.111	396.77
Hydraulic storage manifold group	81b	220
Hydraulic surge accumulator,		
Description	27f	39
Replacement	80f	200
Hydraulic system, test station (See Test station hydraulic system)		
Hydraulic up-lock,		
Description	29d	56
Replacement	102	297
Idle wheel assembly	136	332
Index, link (See Link index)		
Indexing pin, erecting (See Erecting indexing pin)		
Indicator, liquid sight (See Liquid sight indicator)		
Information, general maintenance	34, 35	75
Inspection (See also specific component, replacement)		
Installation procedures (See specific component, replacement)		
Internal cable assemblies (See Cable assembly, replacement)		
Internal pipe assemblies	82e	232.1
Jack:		
Center	212	398.34.1
Assembly	212c	398.34.5
Disassembly	212b	398.34.1
Installation	212d	398.34.7
Removal	212a	398.34.1
Forward and auxiliary	211	398.34
Assembly	211c	398.34.1
Disassembly	211b	398.34
Installation	211d	398.34.1
Removal	211a	398.34
Outrigger	214.1	
Assembly	214.1c	
Disassembly	214.1b	
Installation	214.1d	
Removal	214.1a	
Joint Swivel (See Swivel joint)		
Kingpin support:		
Assembly	209c	398.28
Disassembly	209b	398.28
Installation	209d	398.28
Removal	209a	398.28

	Paragraphs	Pages
Kit,		
Modification (<i>See</i> Modification kit)		
Winterization (<i>See</i> Winterization kit)		
Lamp assemblies, clearance (<i>See</i> Clearance lamp assemblies)		
Latch clevis group		
Latch, switch trip (<i>See</i> Switch trip latch)		
Launcher base	100	296.4
Launcher base assembly, maintenance (<i>See</i> specific component, replacement)	9a	12
Launcher base cable assembly		
Launcher basic accessory kit	65a	116
Launcher-down cycle (<i>See</i> System operation)	15	18.3
Launcher electrical system, maintenance (<i>See</i> specific component, replacement)		
Launcher erecting beam,		
Description		
Emergency lowering	9b	12
Lowering	42	82
Raising	44b	86
Launcher erecting beam assembly, maintenance (<i>See</i> specific component, replacement)	44a	86
Launcher field modification kit, maintenance (<i>See</i> specific component)		
Launcher hydraulic system, maintenance (<i>See</i> specific component, replacement)		
Launcher plate-lock		
Launcher pressure fluid filter (<i>See also</i> Pressure fluid filter)	78	167
Launcher rack assembly	80f	200
Launcher strut	61	103
Launcher strut cap	9c	15
Launcher sub-surface four-rack modification kit	62	107
Launcher sub-surface four-rack modification kit, maintenance (<i>See</i> specific component, replacement)	14	18
Launcher transport modification kit		
Launcher transport modification kit, maintenance (<i>See</i> specific component, replacement)	13	17
Launcher-up cycle (<i>See</i> System operation)		
Launching-handling breakaway installation, maintenance (<i>See</i> specific component, replacement)		
Launching-handling rail		
Launching-handling rail, hoisting	12	17
Launching-handling rail inching device, maintenance (<i>See</i> specific component, replacement)	36c	75
Launching-handling rail, maintenance (<i>See</i> specific component, replacement)		
Limit switch mechanical linkage, up-lock (<i>See</i> Up-lock limit switch mechanical linkage)		
Limit switch, up-lock (<i>See</i> Up-lock limit switch)		
Link, cable (<i>See</i> Cable link)		
Link index		
Linkage, up-lock switch mechanical (<i>See</i> Up-lock limit switch mechanical linkage)	71	154
Liquid sight indicator		
Loading rack bridge frames	82h	236
(USAREUR)		
Loading rack clamp assembly	194.120	396.85
(Mobile)		
(USARAL)	216c	398.34.7
(USAREUR)	194.88	396.58
Loading rack support clamp assembly	194.108	396.76
Loading rack support	173	361
Locking wedge adjuster assembly,	197	397
Forward		
Rear	73	156
Locking wedge, emergency release of	74	159
Locking wedge group (<i>See</i> Wedge group)	42	82
Locking wedge hydraulic cylinder		
Locking wedge solenoid valve (<i>See</i> Valve, solenoid, locking wedge)	29b(3)	56

	Paragraphs	Pages
Loudspeaker assembly, permanent magnet (<i>See</i> Permanent magnet loudspeaker assembly)		
Loudspeaker with cable assembly		
(USARAL)	189	384
(USAREUR)	194.99	396.66
Lubrication (<i>See</i> specific component, replacement)	194.118	396.83
Maintenance precautions (<i>See</i> Precautions)		
Manifold, accumulator (<i>See</i> Down-lock and accumulator manifold group)		
Manifold, down-lock (<i>See</i> Down-lock manifold group)		
Manufacturers' codes or symbols	7	11
Manufacturers' names (<i>See</i> Manufacturers' codes or symbols)		
Marker light assembly		
Mechanical linkage, up-lock limit switch (<i>See</i> Up-lock limit switch mechanical linkage)	208b	398.24
Missile-away switch		
Missile hydraulic pressure fluid filter (<i>See also</i> Pressure fluid filter)	112	303
Description		
Replacement	28b	52
Missile hydraulic shut-off valve (<i>See</i> Valve, shut-off, missile hydraulic)	80k	196
Missile hydraulic solenoid valve (<i>See</i> Valve, solenoid, missile hydraulic)		
Missile hydraulic system (<i>See</i> System operation) (<i>See</i> Functional description)		
Missile umbilical cable assemblies (<i>See</i> Cable assembly, replacement)		
Missile umbilical wiring harness assembly		
Mobile launcher axle:	113	303
Air line coupling		
Brake group and wheel cylinder assembly	207f	398.21
Brake system power cluster	207e	398.18
Cable assembly	207b	398.11
Connecting link	207g	398.23
General	207h	398.23
Tiedown linkage	207a	398.11
Wheel and tire group	207i	398.23
Models, differences among (<i>See</i> Differences among models)	207c	398.17
Modification kit, launching section, HERCULES,		
(Mobile)		
(USARAL)	14.7	18.3
(USAREUR)	14.4,	18.1,
	194.84-	396.57
	194.103	
	45.5,	18.3,
	194.104-	396.75
	194.121	
Modification work orders	16	18.4
Motor cable assembly (<i>See</i> Cable assembly, replacement)		
Motor, ac (<i>See</i> AC motor)		
Mounting brackets		
(USARAL)	194	389
(USAREUR)	194.103	396.68
	194.121	396.84
Names, manufacturers' (<i>See</i> Manufacturers' codes or symbols)		
NIKE-AJAX launching and handling rail lock switch linkage	69	152
Nomenclature	4	10
Operational check		
Orientation	87f	77
Outrigger assemblies:	86e	76
Assembly		
Disassembly	214c	398.34.7
Installation	214b	398.34.7
Removal	214d	398.34.7
	214a	398.34.7
Panel cover		
Parts maintenance	81a	220
Permanent magnet loudspeaker assembly	31	73
	188	384

	Paragraphs	Pages
(USARAL)		
(USAREUR)		
Pin, indexing, erecting (<i>See</i> Erecting indexing pin)	194.98	396.65
Pin, quick-release (<i>See</i> Quick-release pin)	194.117	396.81
Pins, sleeve bearing (<i>See</i> Sleeve bearing pins)		
Pipe assemblies, internal (<i>See</i> Internal pipe assemblies)		
Pivot group		
Plate-lock, launcher (<i>See</i> Launcher plate-lock)		
Plug cock,	119	310
Description		
Replacement	26c	28
Pneumatic depressurization	85	242
Pneumatic precharge procedures,	41	80
Accumulator		
Compressed gas cylinder	40a	79
Pneumatic tank valve assembly and air filler manifold group, replacement:	40b	79
Air reservoir air filler		
Equilibrator accumulator air filler	80s	210
Surge accumulator air filler	80u	212
Power cylinders,	80t	210
Description		
Replacement		
Power distribution box (<i>See also</i> specific component, replacement)	11a, 27n	16, 47
Description	97	288.1
Replacement		
Precautions:	10a	15
Electrical	64	108
Hydraulic		
Pressurized pneumatic and hydraulic systems	58a, 105	101, 301
Precharge system, hydraulic (<i>See</i> System operation) (<i>See also</i> Pneumatic precharge procedures)	37c, 58b	77, 101
Preformed packings	58c	101
Pressure fluid filter (<i>See also</i> Launcher pressure fluid filter) (<i>See also</i> Missile Hydraulic pressure fluid filter)	37b	77
Pressure gage access door assembly	27e	38
Pressure gage, dial indicating (<i>See</i> Dial indicating pressure gage)	80c	172
Pressure reducer valve (<i>See</i> Valve, pressure reducer)		
Pressure release, hydraulic (<i>See</i> Hydraulic pressure release)		
Pressurization (<i>See</i> Pneumatic precharge procedures)		
Procedures, general maintenance:		
Cable assembly terminal connections	38d	78
Cementing gaskets	36b	75
Dust covers	38e	79
Hoisting launching-handling rail	36c	75
Hydraulic fluid	37a	77
Opening and closing valves	37e	77
Operational check	37f	77
Orientation when performing maintenance	36e	76
Precautions	37c	77
Preformed packing rings, gaskets, and seals, replacement	37b	77
Protecting cable assemblies	38c	77
Schematics	38b	77
Scribing metal parts	36a	75
Torque values	37d	77
Use of erecting beam support	36d	76
Wiring diagrams	38a	77
Publications, related	2	10
Pump, axial pistons (<i>See</i> Axial pistons pump)		
Quick-release pin	149	345
Rack assembly, launcher (<i>See</i> Launcher rack assembly)		
Rail extension assembly, sub-surface (<i>See</i> Sub-surface rail extension assembly)		
Rail power cable group	114	305

	Paragraphs	Pages
Rail release assembly	138	332
Rail section assemblies (USARAL)	194.102	396.68
Rear AJAX rail lock cable assembly (See Cable assembly, replacement)		
Rear locking wedge lock cable assembly (See Cable assembly, replacement)		
Rear locking wedge unlock cable assembly (See Cable assembly, replacement)		
Rear wedge group (See Wedge group)		
Records (See Forms, records, and reports)		
Relay bracket assembly	66j.1	147
Relay rack wiring harness assembly	64k	113
Release assembly, rail (See Rail release assembly)		
Removal procedures (See specific component, replacement)		
Reports:		
Comments, criticisms, and corrections	6e	11
Field report of accidents	6c	11
Report of failure or replacement of part	6f	11
Report of unsatisfactory equipment or materials	6d	11
(See also Forms, records, and reports)		
Reservoir cap assembly	82c	232
Reservoir cover group	82d	232.1
Reservoir, hydraulic oil (See Hydraulic oil reservoir)		
Reservoir tee group	82g	235
Resistor cable assembly bracket group	66c	137
Restrictor	28e	52
Restrictor check valve (See Valve, check, restrictor)		
Retaining strap (See Electrical clamp and retaining strap)		
Rings	37b	77
Running gear, maintenance (See specific component, replacement)		
Running gear, valve group (See Valve group, running gear)		
Safety device assembly	61	103
Safety relief valve, equilibrator (See Valve, safety relief, equilibrator)		
Safety relief valve, hydraulic oil reservoir (See Valve, safety relief, hydraulic oil reservoir)		
Schematics	38b	77
Screws, cap (See Cap screws)		
Scribing metal parts	36a	75
Seals	37b	77
Shaft, screw (See Screw shaft)		
Shell, connector, electrical (See Electrical connector shell)		
Shield assembly, dust (See Dust shield assembly)		
Shield, expansion (See Expansion shield)		
Shock strut assembly	60	102
Shutoff cock	64h.1	111
Sleeve bushings	77	165
Speed control valve (See Valve, speed control)		
Squib test wiring harness (See Wiring harness, squib test)		
Stop and positioning bolt	139	334.1
Stop and positioning tube assembly	129	326
Stop light-taillight assemblies	208c	398.26
Strap, retaining (See Electrical clamp and retaining strap)		
Strut arms	9c	15
Strut assembly, shock (See Shock strut assembly)		
Strut cap, launcher (See Launcher strut cap)		
Strut, launcher (See Launcher strut)		
Support assembly, retractable (See Retractable support assembly)		
Support, erecting beam (See Erecting beam support)		
Support, loading rack (See Loading rack support)		
Support trunnion:		
Installation	89f	259
Removal	89e	254
Surge accumulator, hydraulic (See Hydraulic surge accumulator)		
Switch, igniter receptacle interlock	66b.1	134.1
Switch linkage, NIKE-AJAX launching and handling rail lock (See NIKE-AJAX launching and handling rail lock switch linkage)		
Switch, missile-away (See Missile-away switch)		

	Paragraphs	C20 Pages
Switch trip latch		
Switch, up-lock limit (<i>See Up-lock limit switch</i>)	70	152
Switches, electrical (<i>See Electrical switches</i>)		
Swivel joint		
Symbols, manufacturers' (<i>See Manufacturers' codes or symbols</i>)	27i	43
System by-pass valve (<i>See Valve, by-pass, system</i>) (<i>See also Valve, globe</i>)		
System, operation:		
Hydraulic precharge system	21	21
Launcher-down cycle	23	23
Launcher-up cycle	22	21
Missile hydraulic system	24	24
System safety relief valve (<i>See Valve, safety relief, system</i>)		
Tables:		
Decelerator acceptance test using hydraulic test stand 8523711 (table XIII)		316
Effectivity of major items (table I)		6
Hydraulic pumping unit assembly external tube fittings (table XI)		213
Hydraulic pumping unit assembly network-pressurization and torque value requirements (table XII)		
Modification work orders (table III)		215
Parts required for launcher erecting beam emergency lowering and locking wedge release hookups (table VI)		19
Recommended coupling nut torque values (table V)		83
Shock strut assembly leakage test with hydraulic test stand 8523711 (table X) ..		77
Special tools and equipment (table IV)		107
Troubleshooting:		68
Hydraulic pumping unit (table IX)		
Index (table VII)		97
Launcher electrical and hydraulic erecting systems (table VIII)		91
Tank assembly, air (<i>See Air tank assembly</i>)		92
Tee group, reservoir (<i>See Reservoir tee group</i>)		
Telephone-jack extension cable assembly		
Terminal board assembly	65e	132
Terminal board group:	66k	149
Launching-handling rail		
Power distribution box	115	308.1
Terminal connections, cable assembly	64f	109
Test procedures (<i>See specific component, replacement</i>) (<i>See also Operational check</i>) ..	38d	78
Test station hydraulic pumping unit (<i>See Hydraulic pumping unit</i>)		
Test station hydraulic system:		
(USARAL)	24.1	24.1
(USAREUR)	24.2	24.2
Test station valve assembly:		
(Mobile)		
(USARAL)	216	398.34.12
(USAREUR)	194.89	396.58
Tools and equipment:	194.109	396.77
Common		
Special	32	73
Torque values (<i>See also specific component, replacement</i>)	33	73
Transport modification kit:	37d	77
Description		
Maintenance (<i>See specific component</i>)		
Trip latch, switch (<i>See Switch trip latch</i>)	13	17
Troubleshooting:		
Hydraulic pumping unit	54, 55	97
Launcher electrical and hydraulic erecting systems	47, 48	91, 92
Launcher electrical installation:		
Launcher base and launcher erecting beam		
Power distribution box	51	96
Launching-handling rail	50	96
Scope	52, 53	96
Trunnion, support, (<i>See Support trunnion</i>)	46	91
Tube assembly (<i>See Hydraulic networks, replacement</i>)		

	Paragraphs	Pages
Tube assembly (See Hydraulic networks, replacement)		
Tube assembly, drain (See Drain tube assembly)		
Tube assembly, stop and positioning (See Stop and positioning tube assembly)		
Tube fittings:		
(USARAL)	194.90	396.59
(USAREUR)	194.110	396.77
Tube fittings and hose assemblies, hydraulic network (See Hydraulic network tube fittings and hose assemblies)		
Up-cycle priority valve (See Valve, up-cycle priority)		
Up-down solenoid valve (See Valve, solenoid, up down)		
Up-lock cable assembly (See Cable assembly, replacement)		
Up-lock, hydraulic (See Hydraulic up-lock)		
Up-lock limit switch	65d(1)	130
Up-lock limit switch mechanical linkage	65d(2)	130
Up-lock manifold group	81c	220
Valve:		
Air filler		
Description	26a	25
Replacement	80s, 80t, 80u	210, 210
By-pass, equilibrator system (See also Valve, globe)		
Description	27g(2)	40
Replacement	86	247
By-pass, system (See also Valve, globe)		
Description	27g(2)	40
Replacement	80m	202
Cam-operated:		
Description	27o	47
Replacement	84	242
Check, hydraulic oil return line		
Description	28d	52
Replacement	82g, 94e	235, 285
Check, hydraulic panel		
Description	27m	47
Replacement	81b, 81c, 81f, 81g	220, 220
Check, hydraulic pumping unit		
Description	27d	37
Replacement	80w	214
Check, restrictor		
Description	28g	53
Replacement	90	261
Deloader		
Description	27b	35
Replacement	80w	214
Globe (See also Valve, by-pass, equilibrator system) (See also Valve by-pass, system)		
Pressure reducer		
Description	28c	52
Replacement	80k	196
Priority, down-cycle		
Description	27p	49
Replacement	81c	220
Priority, up-cycle		
Description	27k	45
Replacement	81g	228
Regulating, air pressure		
Description	26d	26
Replacement	80i	192
Safety relief, equilibrator		
Description	27h	41
Replacement	81f	226

	Paragraphs	Pages
Safety relief, hydraulic oil reservoir		
Description		
Replacement	26g	32
Safety relief, system	82f	235
Description		
Replacement	27h	41
Shut-off, missile hydraulic	80h	192
Description		
Replacement	11f, 28f	17, 53
Solenoid, locking wedge	94e, f,	281,
Description	94k, l	285
Replacement	29f	59
Solenoid, missile hydraulic	80f	187
Description		
Replacement	28a	51
Solenoid, up-down	80g	187
Description		
Replacement	29c	57
Speed control	80c	185
Description		
Replacement	27j	44
Valve assembly, test station (See Test station valve assembly)	81c, 81g	220, 228
Valve cable assembly (See Cable assembly, replacement)		
Valves, opening and closing	37c	77
Wedge group,		
Air bleed procedures		
Description	89b	251
Replacement,	29b	55
Forward locking wedge group		
Rear locking wedge group	73	156
Wheel assembly, idler (See Idler wheel assembly)	74	159
Winterization kit, guided missile launcher and guided missile launching section	15.1,	18.4,
Wiring harness assembly, missile umbilical (See Missile umbilical wiring harness assembly)	198-203.3	398.1
Wiring harness assembly, relay rack (See Relay rack wiring harness assembly)		
Wiring harness, squib test	66j	145
Wiring harnesses, hydraulic pumping unit power	66g	141

Units org under fol TOE:

9-12 (1)

9-17 (1)

9-47 (1)

9-57 (2)

9-76 (2)

9-87 (3)

9-227 (3)

9-377 (1)

9-500 (Tms EA,FA,FR) (3)

9-510 (Tm FA) (1)

NG: TOE: 44-545 (4)

USAR: None.

For explanations of abbreviations used, see AR 320-50.

100-100000-100
100-100000-100
100-100000-100
100-100000-100
100-100000-100
100-100000-100

100-100000-100
100-100000-100
100-100000-100
100-100000-100
100-100000-100
100-100000-100

100-100000-100
100-100000-100
100-100000-100
100-100000-100
100-100000-100
100-100000-100

100-100000-100
100-100000-100
100-100000-100
100-100000-100
100-100000-100
100-100000-100

By Order of Wilber M. Brucker, Secretary of the Army:

Official:

R. V. LEE,
Major General, United States Army
The Adjutant General

L. L. LEMNITZER,
General, United States Army
Chief of Staff

Distribution:

Active Army:

To be distributed in accordance with DA Form 12-7 requirements for TM 9 Series (UNCL) Plus the following Formula:

DCSLOG (1)
Tech Stf, DA (1) except
CofOrd (12)
USARADCOM (2)
USARADCOM Rgn (2)
MDW (1)
Seventh US Army (3)
EUSA (5)
Corps (2)
USAOGMS (70)
Fld Comd, Def Atomic Spt Agcy (20)
Raritan Arsenal (39)
MAAG (Italy) (57), (Denmark, Norway,
Belgium, W. Germany, Taiwan, Netherlands)
(18), (France) (11)

JUSMAG (Greece) (18)
JAMMAT (18)

Units org under fol TOE:

9-12 (1)
9-17 (1)
9-45 (1)
9-47 (1)
9-56 (1)
9-57 (2)
9-76 (2)
9-227 (3)
9-377 (1)
9-500 (DD) (3)
9-510 (FA) (3)

NG: TOE 44-545 (4); 44-546 (1); 44-547 (1).

USAR: None

For explanation of abbreviations used, see AR 320-50.

by Order of William M. Bricker, Secretary of the Army

L. L. LEWIS
Colonel, United States Army
Chief of Staff

Major General, United States Army
The Adjutant General

These documents are submitted in accordance with DA Form 11-2, requirements for the 3 Series (LWCP) for the following:

- 1. JAMES (191)
- 2. JAMES (191)
- 3. JAMES (191)
- 4. JAMES (191)
- 5. JAMES (191)
- 6. JAMES (191)
- 7. JAMES (191)
- 8. JAMES (191)
- 9. JAMES (191)
- 10. JAMES (191)
- 11. JAMES (191)
- 12. JAMES (191)
- 13. JAMES (191)
- 14. JAMES (191)
- 15. JAMES (191)
- 16. JAMES (191)
- 17. JAMES (191)
- 18. JAMES (191)
- 19. JAMES (191)
- 20. JAMES (191)
- 21. JAMES (191)
- 22. JAMES (191)
- 23. JAMES (191)
- 24. JAMES (191)
- 25. JAMES (191)
- 26. JAMES (191)
- 27. JAMES (191)
- 28. JAMES (191)
- 29. JAMES (191)
- 30. JAMES (191)
- 31. JAMES (191)
- 32. JAMES (191)
- 33. JAMES (191)
- 34. JAMES (191)
- 35. JAMES (191)
- 36. JAMES (191)
- 37. JAMES (191)
- 38. JAMES (191)
- 39. JAMES (191)
- 40. JAMES (191)
- 41. JAMES (191)
- 42. JAMES (191)
- 43. JAMES (191)
- 44. JAMES (191)
- 45. JAMES (191)
- 46. JAMES (191)
- 47. JAMES (191)
- 48. JAMES (191)
- 49. JAMES (191)
- 50. JAMES (191)
- 51. JAMES (191)
- 52. JAMES (191)
- 53. JAMES (191)
- 54. JAMES (191)
- 55. JAMES (191)
- 56. JAMES (191)
- 57. JAMES (191)
- 58. JAMES (191)
- 59. JAMES (191)
- 60. JAMES (191)
- 61. JAMES (191)
- 62. JAMES (191)
- 63. JAMES (191)
- 64. JAMES (191)
- 65. JAMES (191)
- 66. JAMES (191)
- 67. JAMES (191)
- 68. JAMES (191)
- 69. JAMES (191)
- 70. JAMES (191)
- 71. JAMES (191)
- 72. JAMES (191)
- 73. JAMES (191)
- 74. JAMES (191)
- 75. JAMES (191)
- 76. JAMES (191)
- 77. JAMES (191)
- 78. JAMES (191)
- 79. JAMES (191)
- 80. JAMES (191)
- 81. JAMES (191)
- 82. JAMES (191)
- 83. JAMES (191)
- 84. JAMES (191)
- 85. JAMES (191)
- 86. JAMES (191)
- 87. JAMES (191)
- 88. JAMES (191)
- 89. JAMES (191)
- 90. JAMES (191)
- 91. JAMES (191)
- 92. JAMES (191)
- 93. JAMES (191)
- 94. JAMES (191)
- 95. JAMES (191)
- 96. JAMES (191)
- 97. JAMES (191)
- 98. JAMES (191)
- 99. JAMES (191)
- 100. JAMES (191)

NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM.

